


Comfort system

- ⇒ Outside Mirror, heated and adjustable
- ⇒ Door opener lighting
- ⇒ Alarm system
- ⇒ Entry lights
- ⇒ Power Window
- ⇒ Front Interior Lights
- ⇒ Luggage Compartment Light
- ⇒ Door warning lights
- ⇒ Central Locking System

From 2002 m. y.

Main fuse

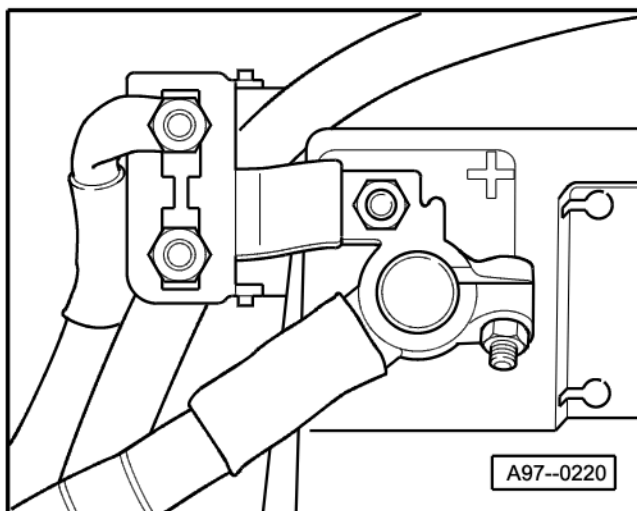


◆ on the Battery



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder

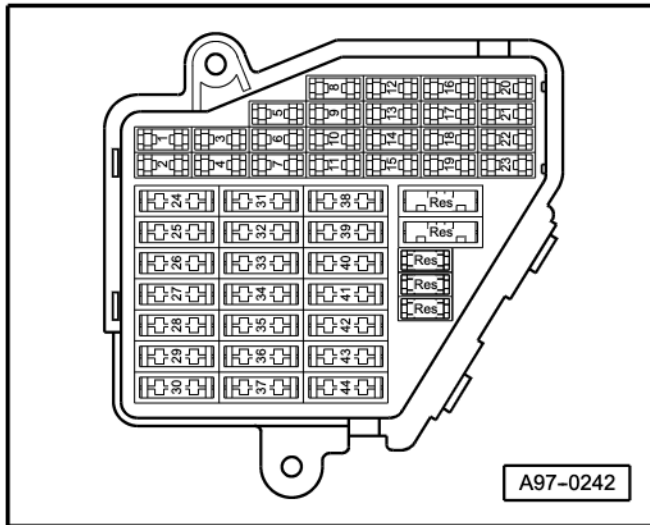

◆ Instrument panel driver side

Fuse Colors

30 A - Green

25 A - Withe

20 A - Yellow

15 A - Blue

10 A - Red

7,5 A - Brown

5 A - Beige




Note:

◆ Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Coupling station with threaded connection

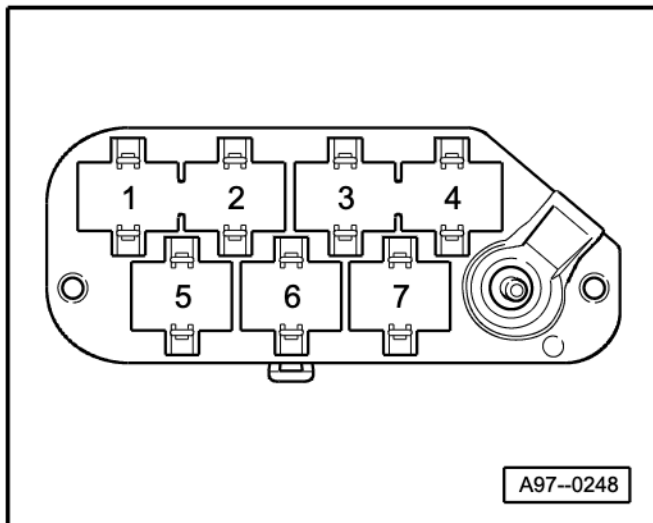

◆ in the electronics box, plenum chamber

3 - 17-Pin Connector, red (T17d)

Connector station A-pillar

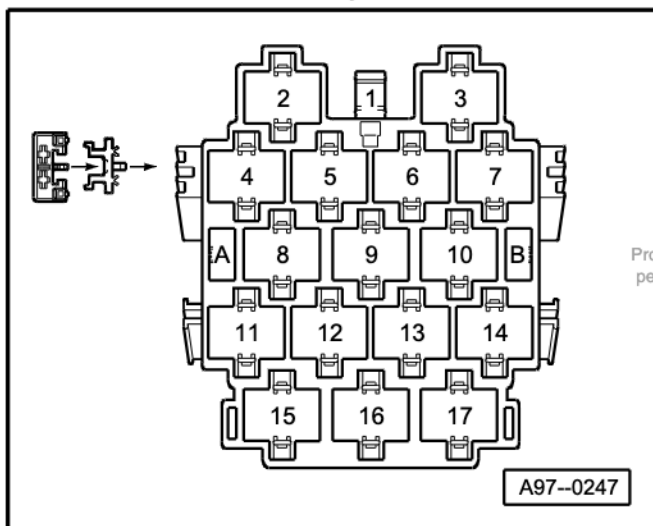

◆ behind side trim, left


9 - 17-Pin Connector, dark brown (T17g)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

10 - 17-Pin Connector, orange (T17f)


14 - 10-Pin Connector, grey (T10d)

4-Pin Relay Carrier with threaded connection

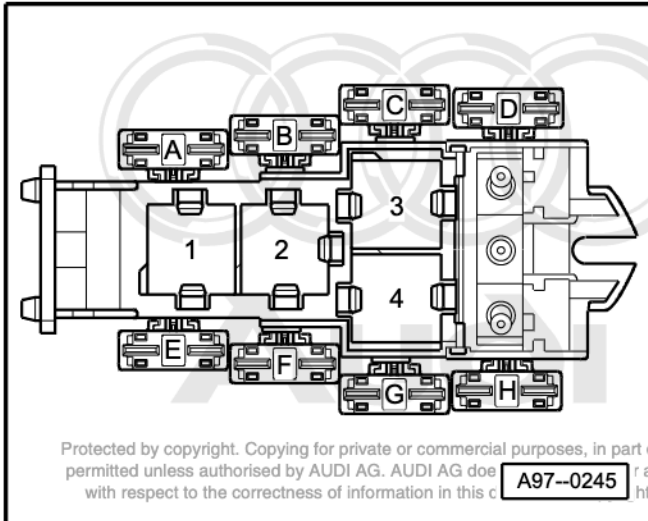

◆ Instrument panel driver side

9-Pin Relay Carrier with Vehicle Electrical System Control Module

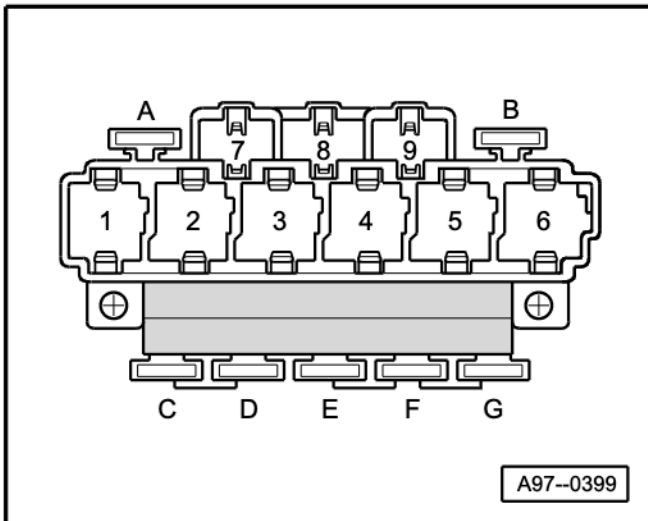


◆ Instrument panel driver side, behind 3-Pin Relay Carrier

D - Power Window Fuse 2 (S280)

F - Power Window Fuse (S37)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

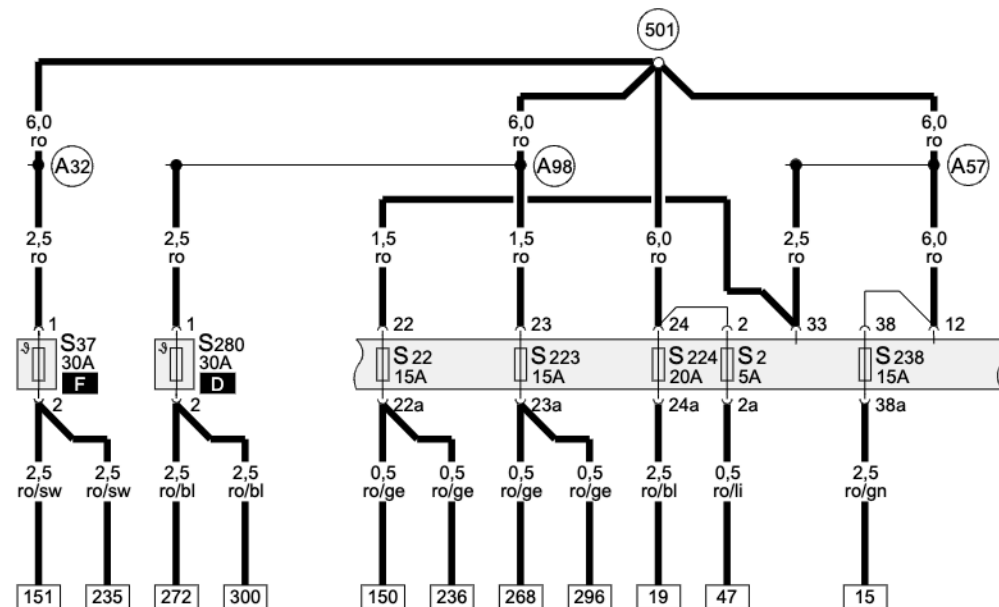

Fuses, Ground connections

- S2 Fuse in fuse holder/relay panel
- S22 Fuse in fuse holder/relay panel
- S37 Power Window Fuse
- S223 Fuse in fuse holder
- S224 Fuse in fuse holder
- S238 Fuse in fuse holder
- S280 Power Window Fuse 2
- 44 Ground connection (lower left A-pillar)
- 77 Ground connection (lower left B-pillar)
- 78 Ground Connection (lower right B-pillar)
- 249 Ground connection -2-, in wiring harness interior
- 277 Ground connection -3-, in wiring harness interior
- 347 Ground connection (in roof wiring harness)
- 501 Threaded connection -2- (30), on the relay plate
- A32 Plus connection (30), in instrument panel wiring harness
- A57 Plus connection -2- (30), in instrument panel wiring harness
- A98 Plus connection -4- (30), in instrument panel wiring harness

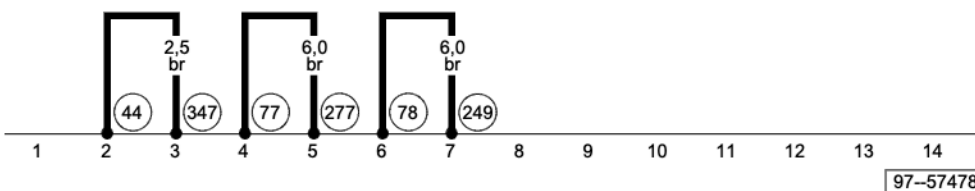

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


97-57478

Central control module for comfort system, Motor to unlock rear lid

- F9 Parking Brake Warning Light Switch
- F248 Switch for unlocking, rear lid lock cylinder
- H12 Alarm Horn
- J393 Central control module for comfort system
- T4i 4-Pin Connector, black, in rear lid
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T12i 12-Pin Connector, black, on central control module for comfort system (used to be Connector 3)
- T16i 16-Pin Connector, brown, on central control module for comfort system (used to be Connector 5)
- V139 Motor to unlock rear lid

- 86 Ground connection -1-, in rear wiring harness
- 135 Ground connection -2-, in instrument panel wiring harness
- 249 Ground connection -2-, in wiring harness interior
- A24 Wire connection (brake system monitoring), in instrument panel wiring harness
- A66 Connector (30a, central locking/anti-, theft warning system/IR), in instrument panel wiring harness
- * with alarm system only
- ** for avant, see applicable avant rear wiring diagram

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

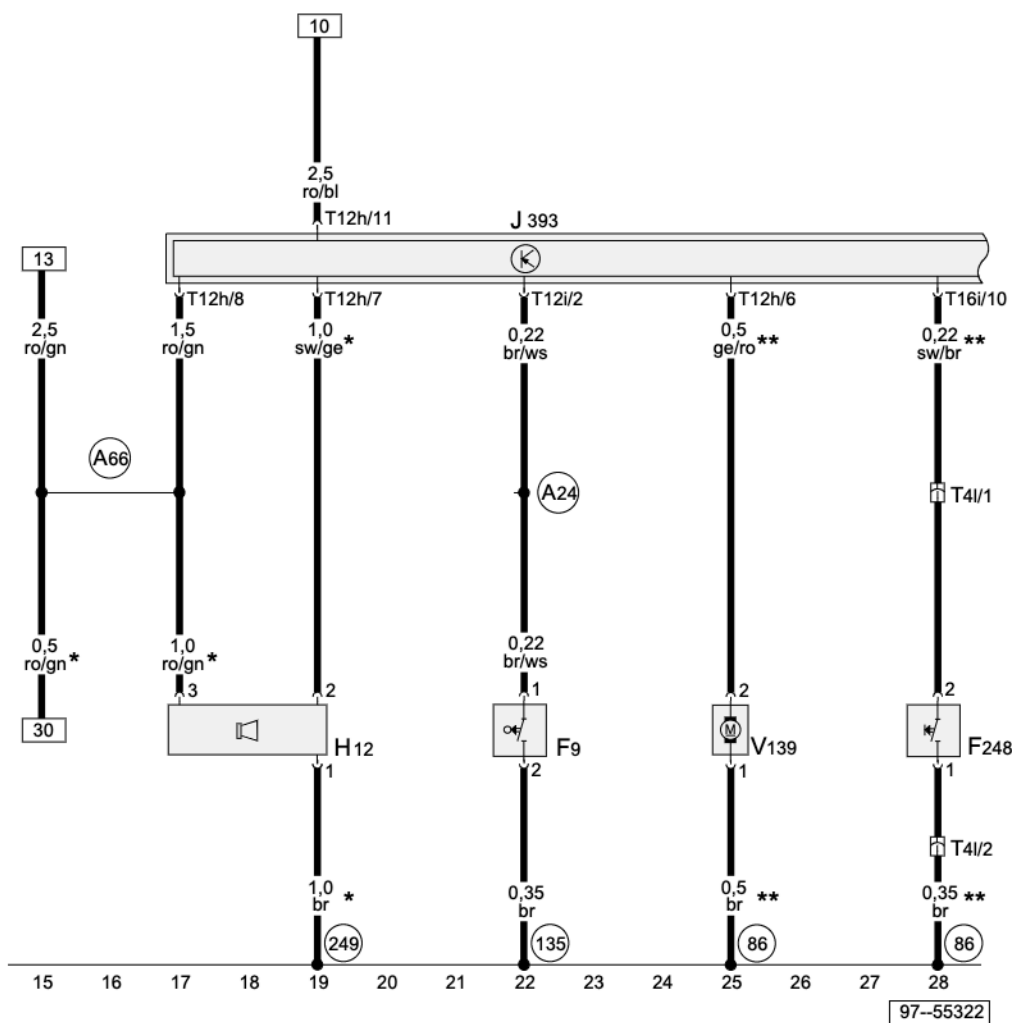

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Central control module for comfort system, Front Hood Switch, Radar Interior Monitoring Control Module 1


- F266 Front Hood Switch
- G303 Radar Interior Monitoring Control Module 1
- J285 Control module with indicator unit in instrument panel insert
- J393 Central control module for comfort system
- T10d 10-Pin Connector, grey, connector station A-pillar, left
- T14 14-Pin Connector, black, in engine compartment, left
- T16 16-Pin Connector, black, diagnostic connection
- T16i 16-Pin Connector, brown, on central control module for comfort system (used to be Connector 5)
- T17f 17-Pin Connector, orange, connector station A-pillar, left
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)
- T32 32-Pin Connector, blue, on instrument panel insert
- T32a 32-Pin Connector, green, on instrument panel insert

12 Ground connection, in engine compartment, left


347 Ground Connection (in roof wiring harness)

A76 Wire connection (K-diagnosis wire), in instrument panel wiring harness

* with alarm system only

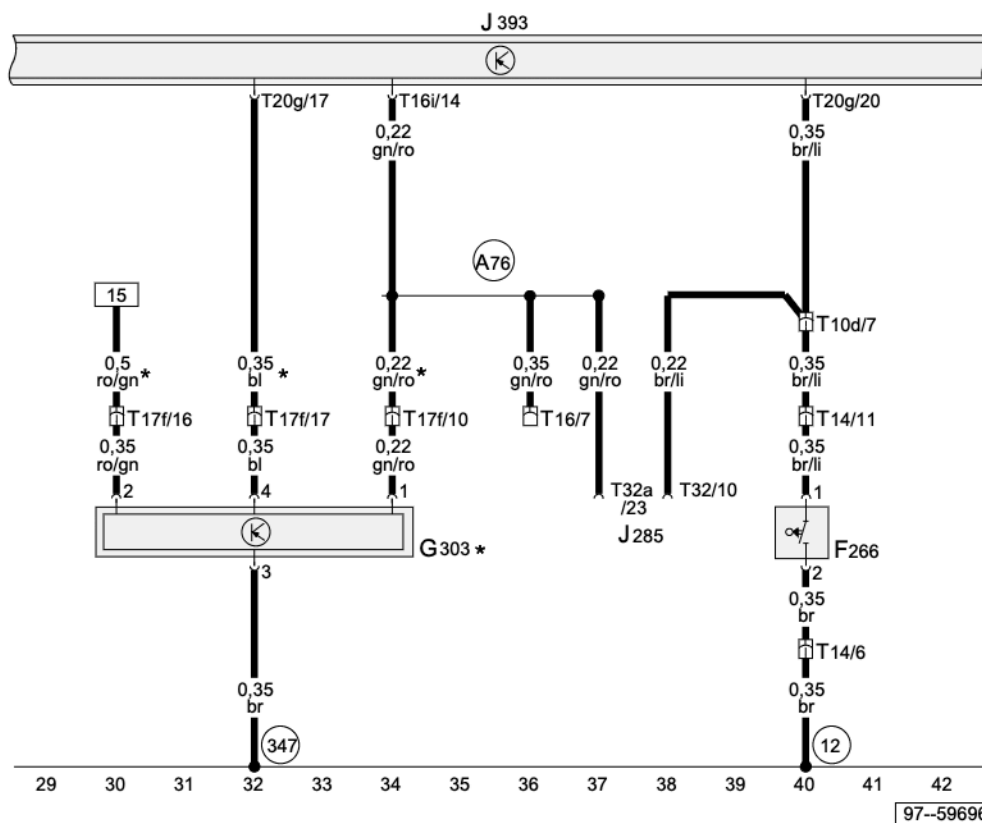


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink

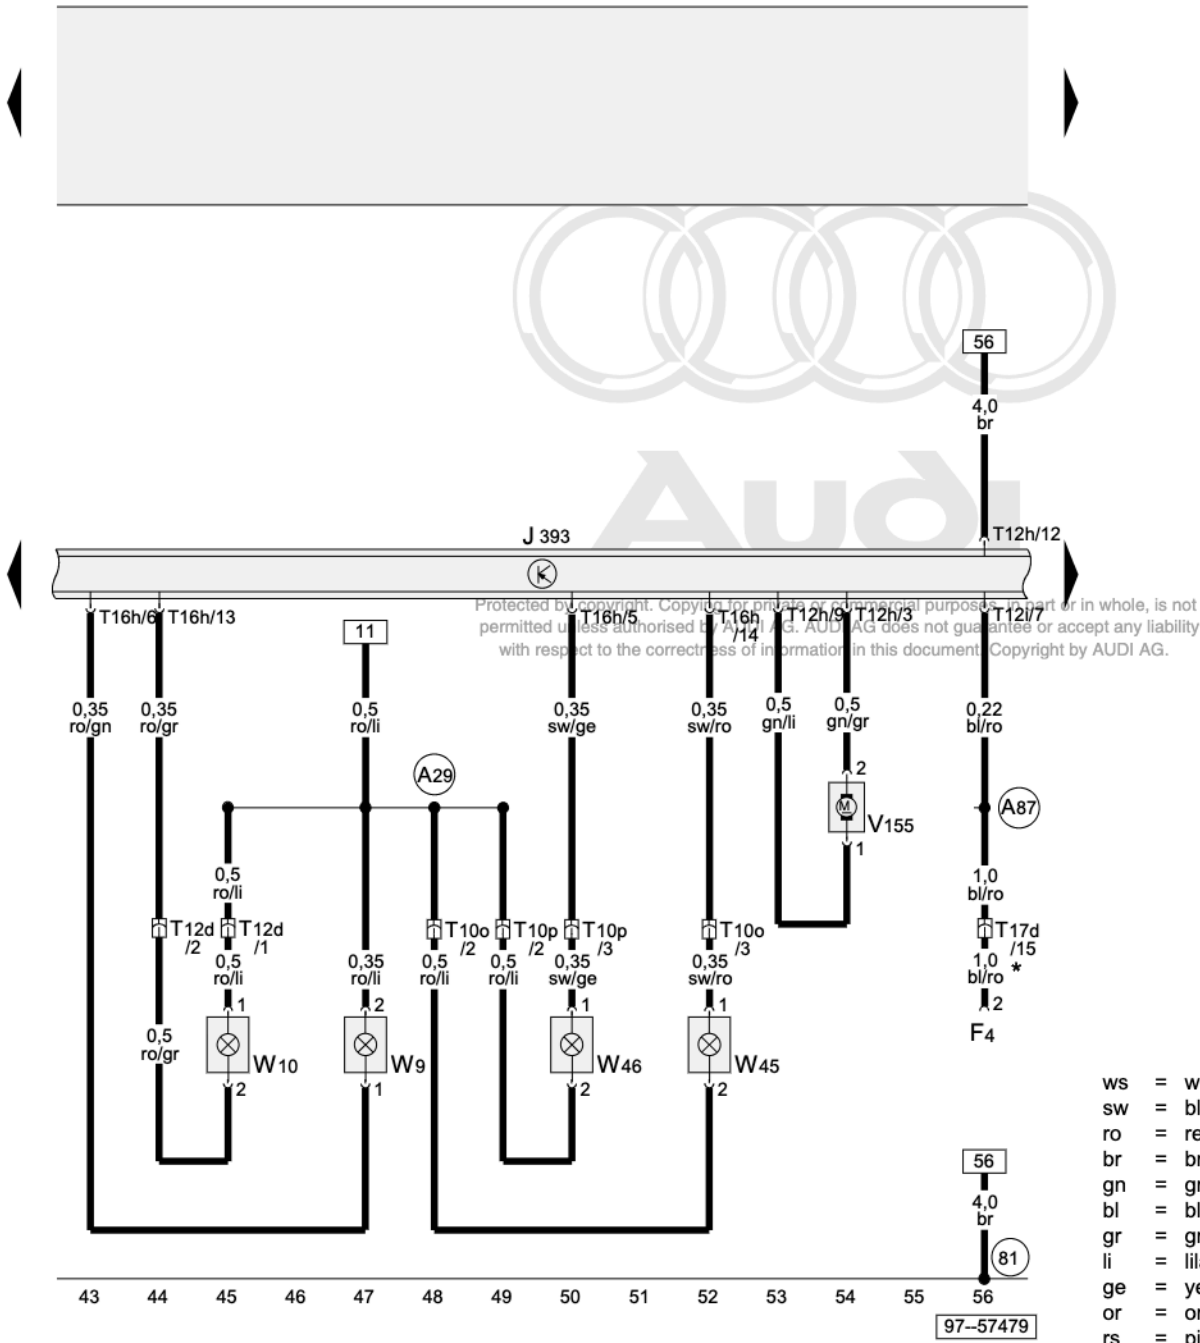

Central control module for comfort system, Motor for fuel tank lid unlock, Footwell Lights

- F4 Back-Up Light Switch
- J393 Central control module for comfort system
- T10o 10-Pin Connector, red, seat wiring connector station, driver seat
- T10p 10-Pin Connector, red, seat wiring connector station, passenger's seat
- T12d 12-Pin Connector, brown, near glove Compartment
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T12i 12-Pin Connector, black, on central control module for comfort system (used to be Connector 3)
- T16h 16-Pin Connector, black, on central control module for comfort system (used to be Connector 2)
- T17d 17-Pin Connector, red, connector station E-box, plenum chamber
- V155 Motor for fuel tank lid unlock
- W9 Left Footwell Light
- W10 Right Footwell Light
- W45 Left Rear Footwell Light
- W46 Right Rear Footwell Light

- 81 Ground connection -1-, in instrument panel wiring harness
- A29 wire connection (interior light), in instrument panel wiring harness
- A87 Connector (reverse lamp), in instrument panel wiring harness
- * Manual transmission only

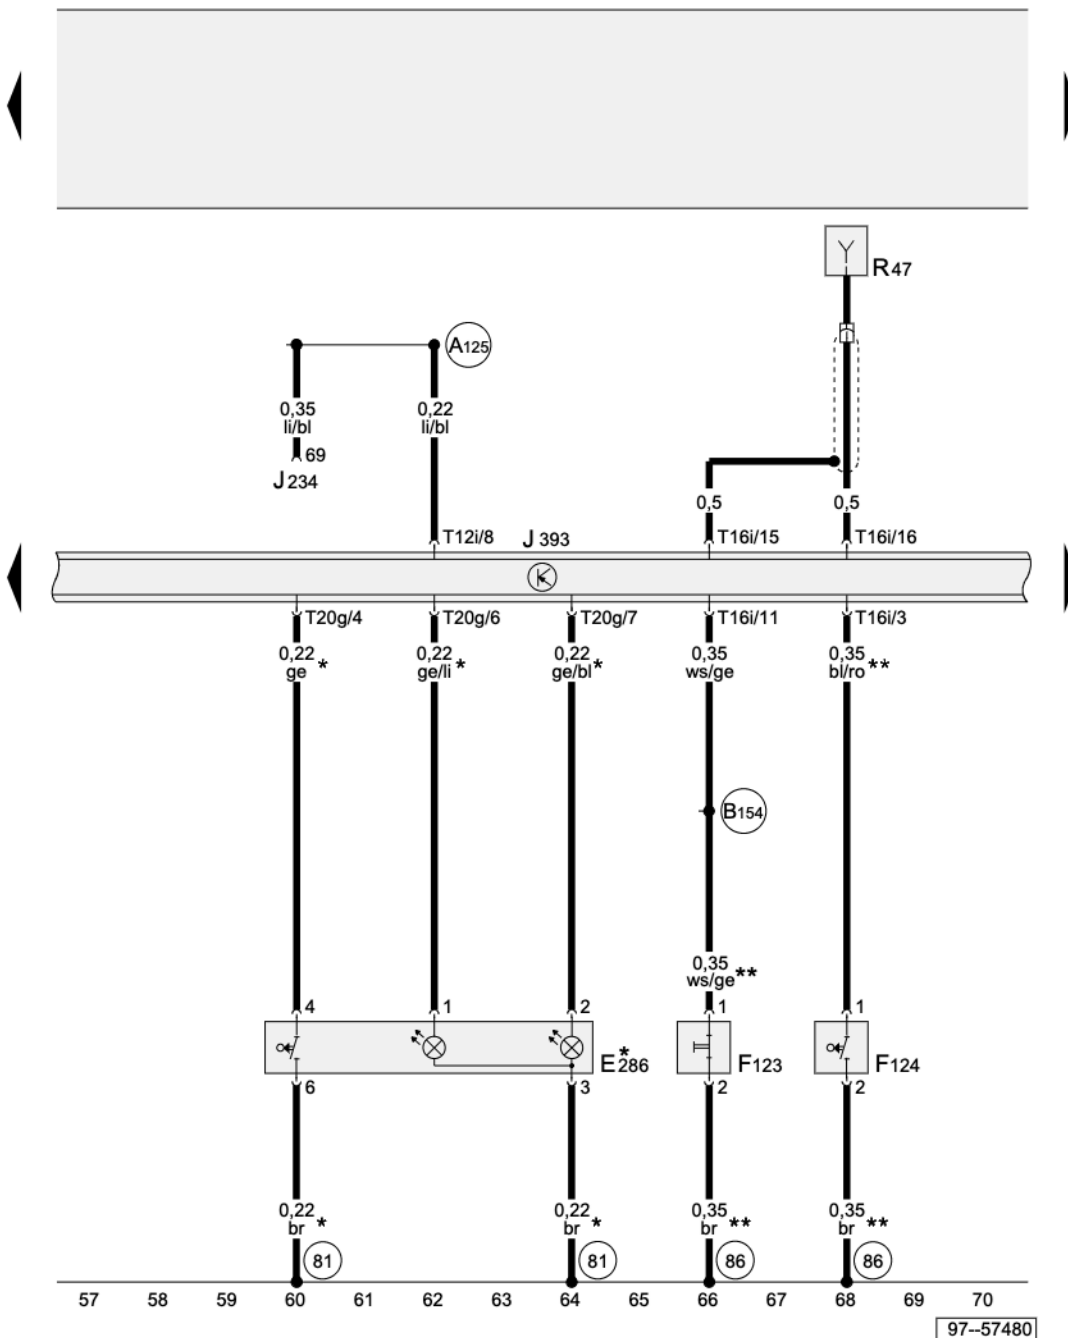

Central control module for comfort system, Antenna, Trunk Lid Alarm Switch, Trunk Lock Alarm/Central Locking Switch, Rear/Center Central Locking Switch


- E286 Rear/Center Central Locking Switch
- F123 Trunk Lid Alarm Switch
- F124 Trunk Lock Alarm/Central Locking Switch
- J234 Airbag Control Module
- J393 Central control module for comfort system
- R47 Central Locking and Anti-theft Alarm System Antenna
- T12i 12-Pin Connector, black, on central control module for comfort system (used to be Connector 3)
- T16i 16-Pin Connector, brown, on central control module for comfort system (used to be Connector 5)
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)

- 81 Ground connection -1-, in instrument panel wiring harness
- 86 Ground connection -1-, in rear wiring harness
- A125 Wire connection (crash signal), in instrument panel wiring harness
- B154 Connector -1- (TK), in wiring harness interior

- * if it exists
- ** for avant, see applicable avant rear wiring diagram

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

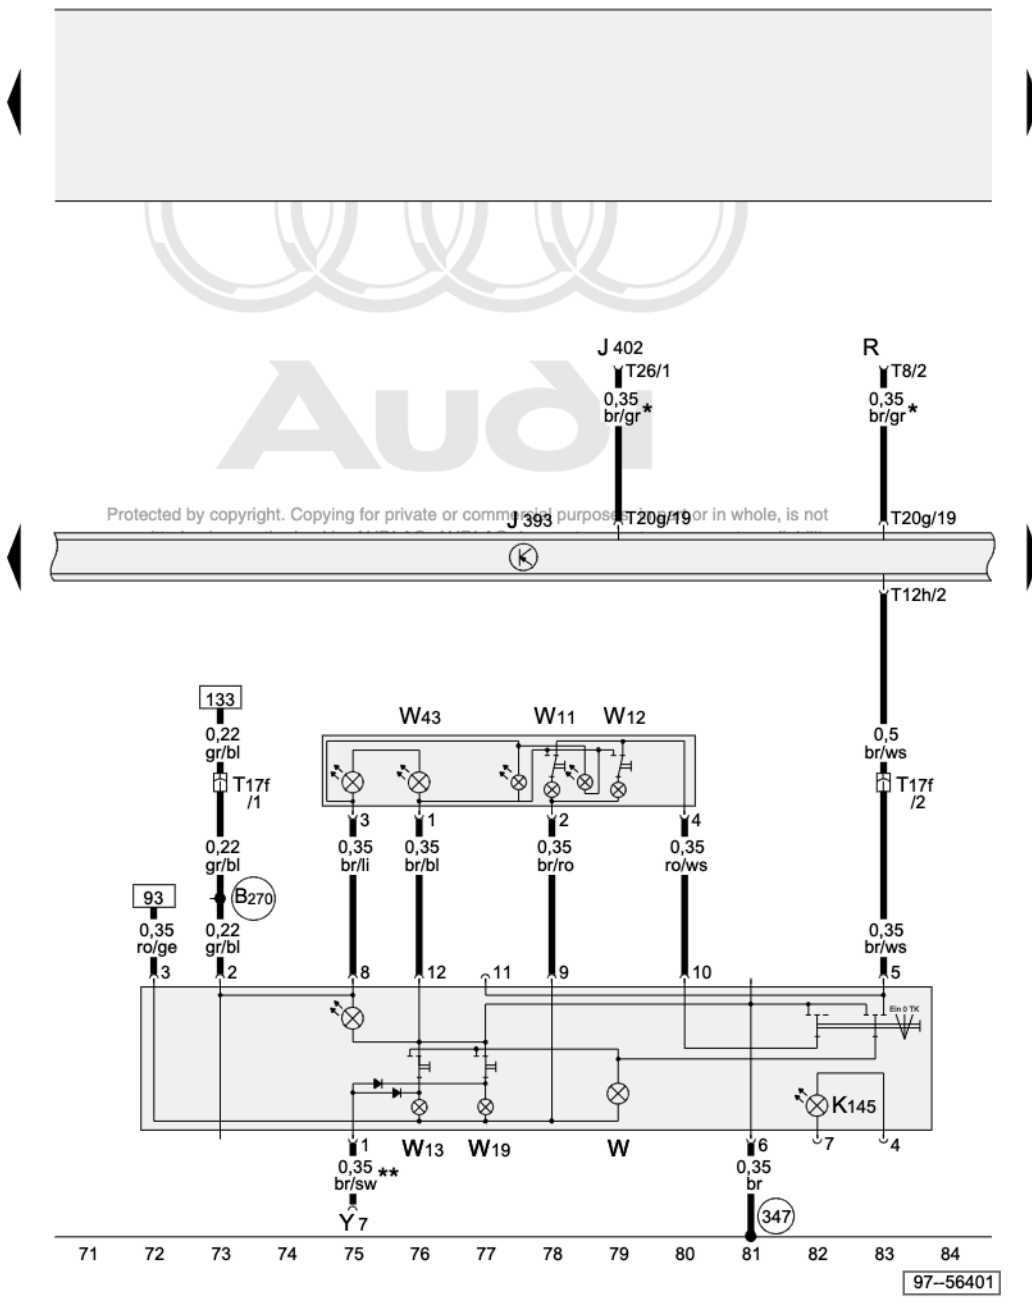

Central control module for comfort system, Front Interior Light, Reading Lights

- J393 Central control module for comfort system
- J402 Control module for operating electronics, navigation
- K145 Warning light for airbag off, passenger side
- R Radio
- T8 8-Pin Connector, black, radio connector III
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T17f 17-Pin Connector, orange, connector station A-pillar, left
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)
- T26 26-Pin Connector, black, on Control Module for operating electronics, navigation
- W Front Interior Light
- W11 Left Rear Reading Light
- W12 Right Rear Reading Light
- W13 Passenger's Map/Reading Light
- W19 Left Front Reading Light
- W43 Rear courtesy lamp
- Y7 Automatic Day/Night Interior Mirror

347 Ground Connection (in roof wiring harness)

B270 Connector (58s), in roof wiring harness

* if it exists (for alarm system)

** with Automatic Day/Night Interior Mirror only

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

Central control module for comfort system, Luggage Compartment Lights, Glove Compartment Light, Make-up Mirror Lights


- E26 Glove Compartment light
- F147 Left Make-Up Mirror Light Switch
- F148 Right Make-Up Mirror Light Switch
- J393 Central control module for comfort system
- L31 Make-up Mirror Light
- T12d 12-Pin Connector, brown, near glove Compartment
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T17f 17-Pin Connector, orange, connector station A-pillar, left
- W6 Glove Compartment Light
- W18 Left Luggage Compartment Light
- W35 Luggage Compartment Light, right

238 Ground connection -1-, in wiring harness interior

347 Ground connection (in roof wiring harness)

B250 Plus Connection (in roof wiring harness)

* for avant, see applicable avant rear wiring diagram
** if it exists

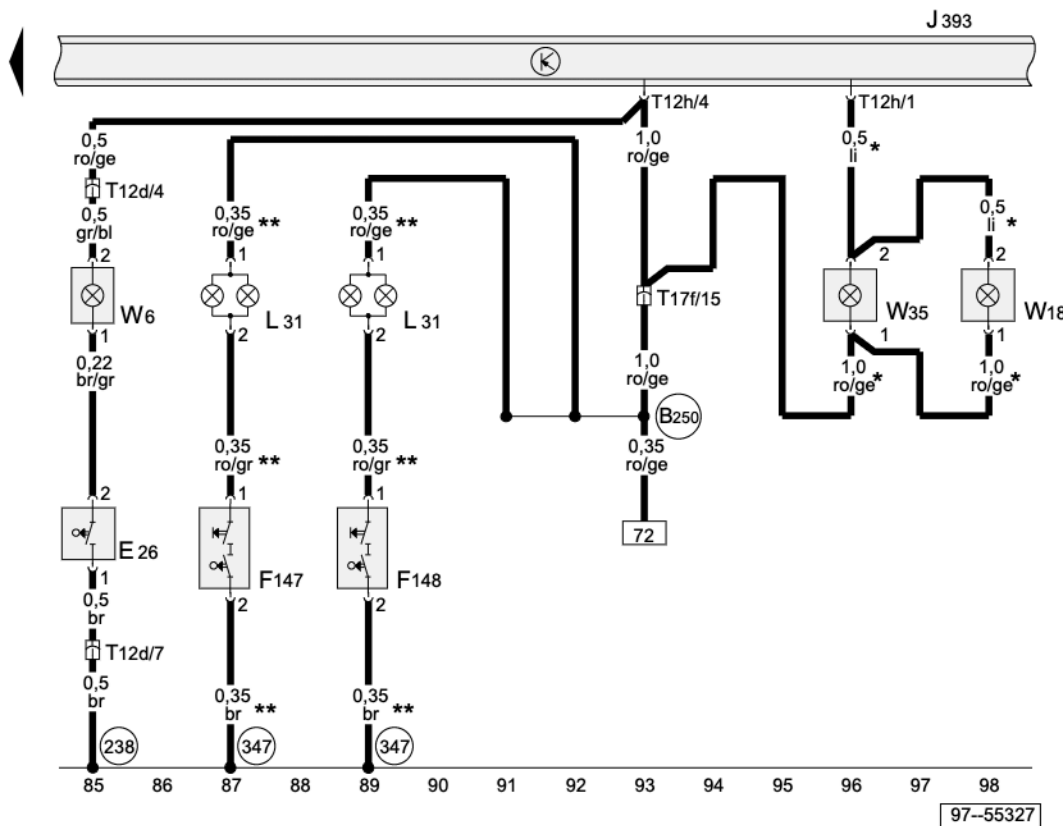

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Central control module for comfort system, Lock unit for central locking, rear, left, without window regulator rear


- F10 Left Rear Door Contact Switch
- F132 Left Rear Central Locking System Activator/Switch
- F222 Lock unit for central locking, rear, left
- F245 Adjusting element for central locking (safe), left rear door
- J393 Central control module for comfort system
- T16h 16-Pin Connector, black, on central control module for comfort system (used to be Connector 2)
- T20b 20-Pin Connector, black, door B-pillar, left
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)
- V115 Left Rear Central Locking System Motor
- V163 Left Rear Central Locking (Safe) Motor

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

207 Ground connection, in left rear door wiring harness

277 Ground connection -3-, in wiring harness interior

J 393

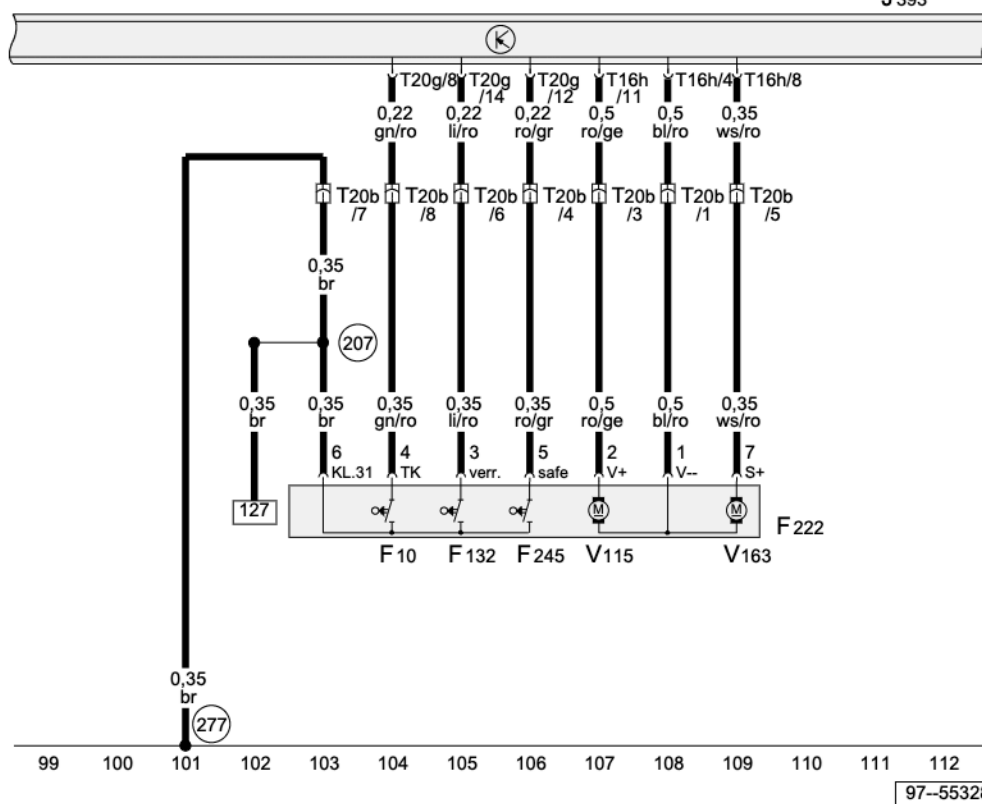



Central control module for comfort system, Lock unit for central locking, rear, right, without window regulator rear

- F11 Right Rear Door Contact Switch
- F134 Right Rear Central Locking System Activator/Switch
- F223 Lock unit for central locking, rear, right
- F246 Adjusting element for central locking (safe), right rear door
- J393 Central control module for comfort system
- T16h 16-Pin Connector, black, on central control module for comfort system (used to be Connector 2)
- T20c 20-Pin Connector, black, door B-pillar, right
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)
- V97 Double Cab Right Rear Door Central Locking System Motor
- V164 Right Rear Central Locking (Safe) Motor

208 Ground connection, in right rear door wiring harness

249 Ground connection -2-, in wiring harness interior

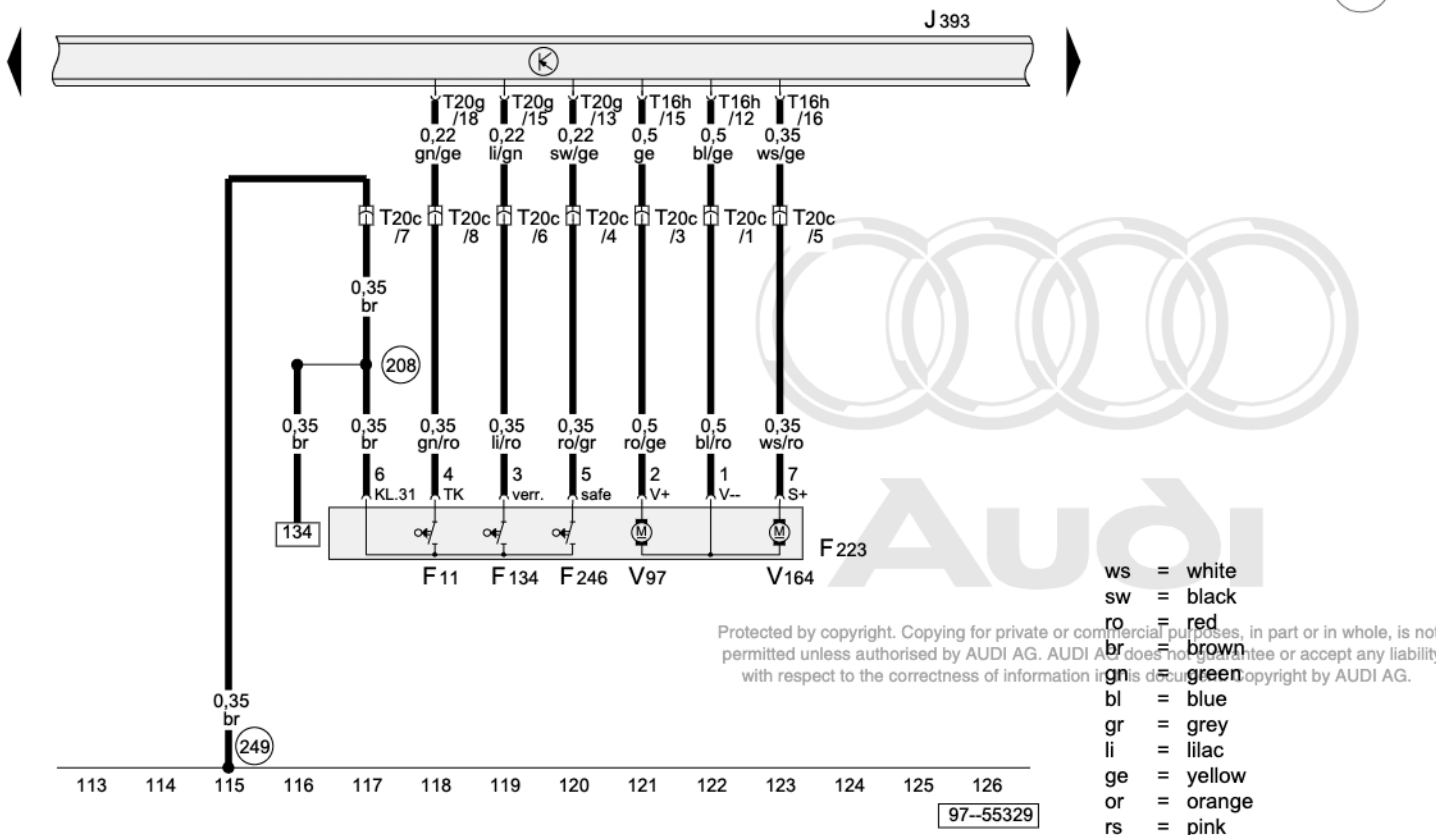

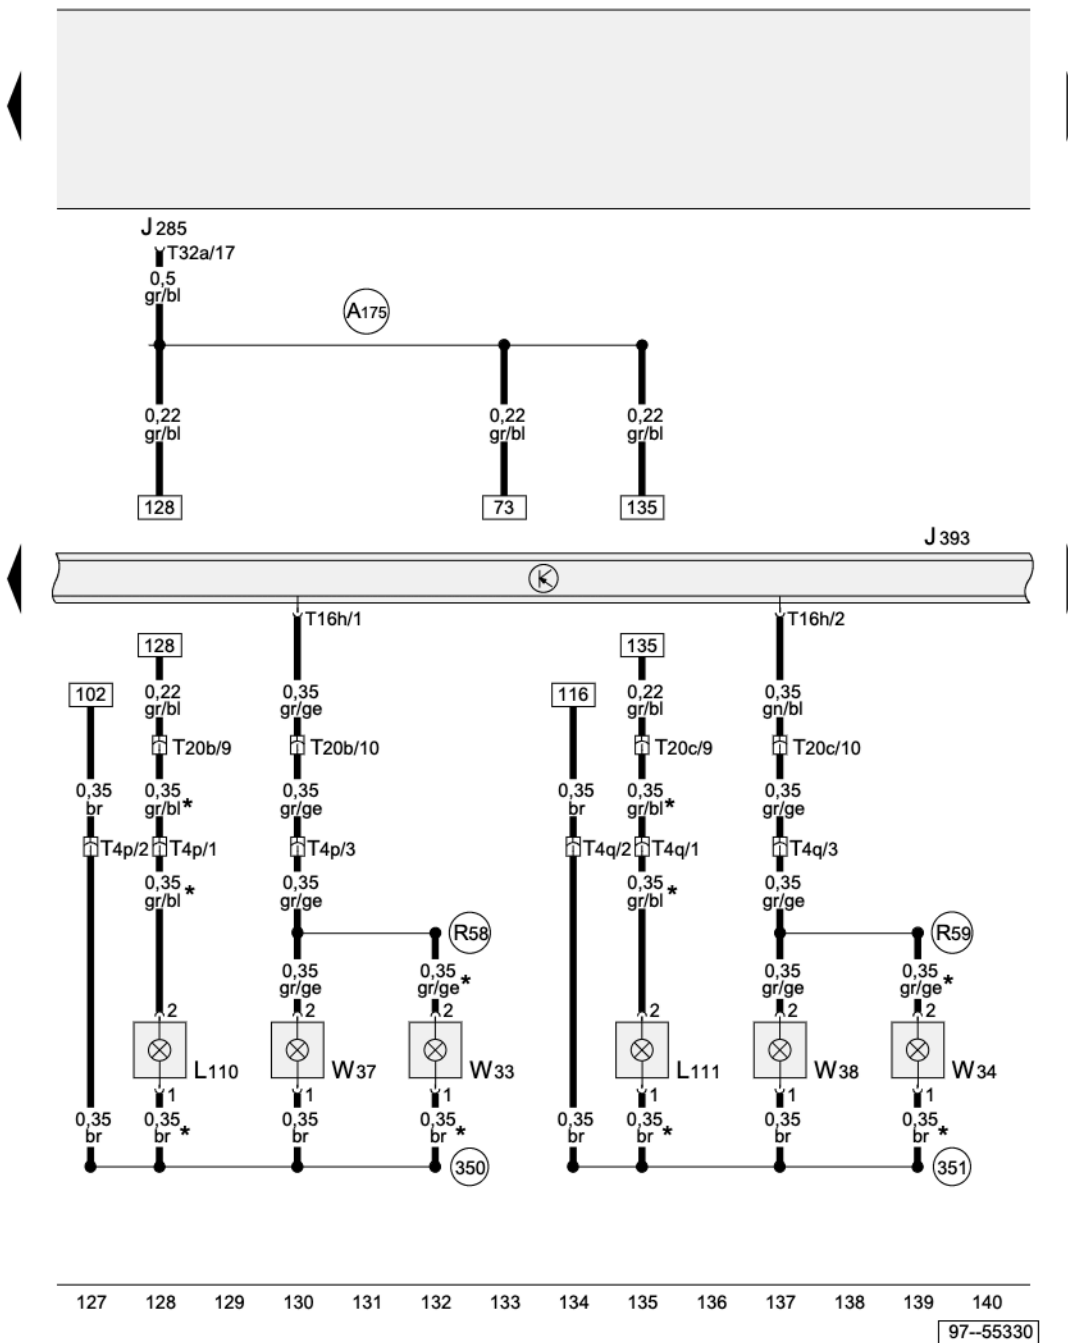

Central control module for comfort system, Entry lights, Door warning lights, Door opener lightings, without window regulator rear

- J285 Control module with indicator unit in instrument panel insert
- J393 Central control module for comfort system
- L110 Door opener lighting, left rear
- L111 Door opener lighting, right rear
- T4p 4-Pin Connector, black, in the door, rear, left
- T4q 4-Pin Connector, black, in the door, rear, right
- T16h 16-Pin Connector, black, on central control module for comfort system (used to be Connector 2)
- T20b 20-Pin Connector, black, door B-pillar, left
- T20c 20-Pin Connector, black, door B-pillar, right
- T32a 32-Pin Connector, green, on instrument panel insert
- W33 Entry light rear, left
- W34 Entry light rear, right
- W37 Door warning light rear, left
- W38 Door warning light rear, right

350 Ground connection -2- (in left rear door wiring harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information and data in this wiring diagram.

351 Ground connection -2- (in right rear door wiring harness)

A175 Wire connection (58s), in instrument panel wiring harness

R58 Courtesy Light Connection (in left rear door wiring harness)


R59 Courtesy Light Connection (in right rear door wiring harness)

* if it exists


Central control module for comfort system, Door control module, driver side with window regulator, Switch for window regulator, Vehicle Inclination Sensor

- E39 Safety switch for window regulator rear
- E40 Switch for window regulator front left
- E41 Switch for window regulator front right
- E53 Switch for window regulator rear left, driver
- E55 Switch for window regulator rear right, driver
- G384 Vehicle Inclination Sensor
- J386 Door control module, driver side
- J393 Central control module for comfort system
- T10e 10-Pin Connector, black, on door control module, driver's door
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T16i 16-Pin Connector, brown, on central control module for comfort system (used to be Connector 5)
- T20 20-Pin Connector, black, door A-pillar, left
- T32c 32-Pin Connector, grey, door control module, driver's door
- V14 Left Window Motor

- 44 Ground connection (lower left A-pillar)
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness

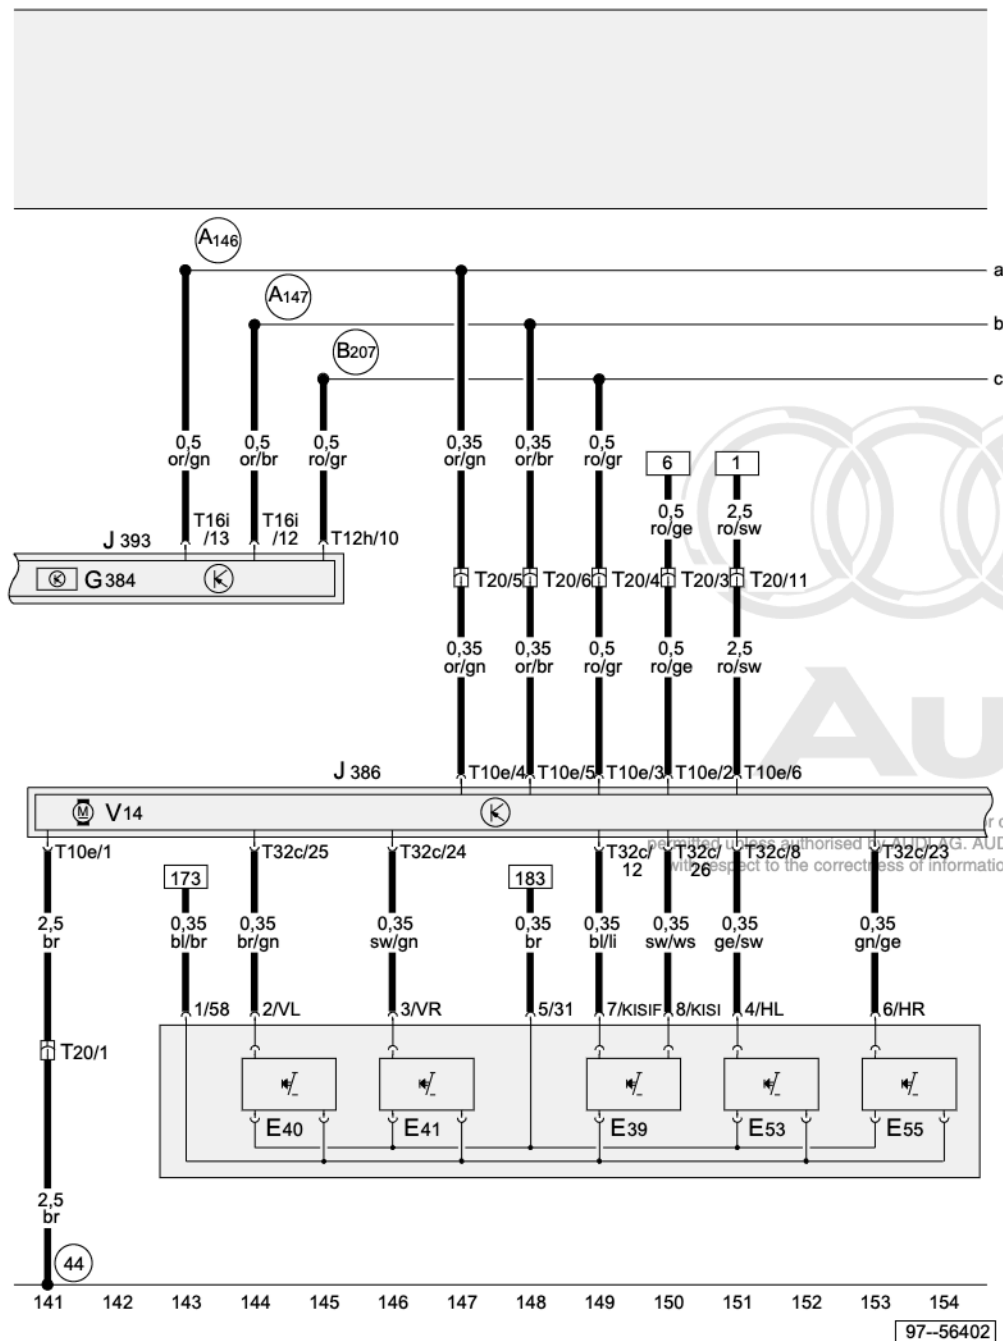

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

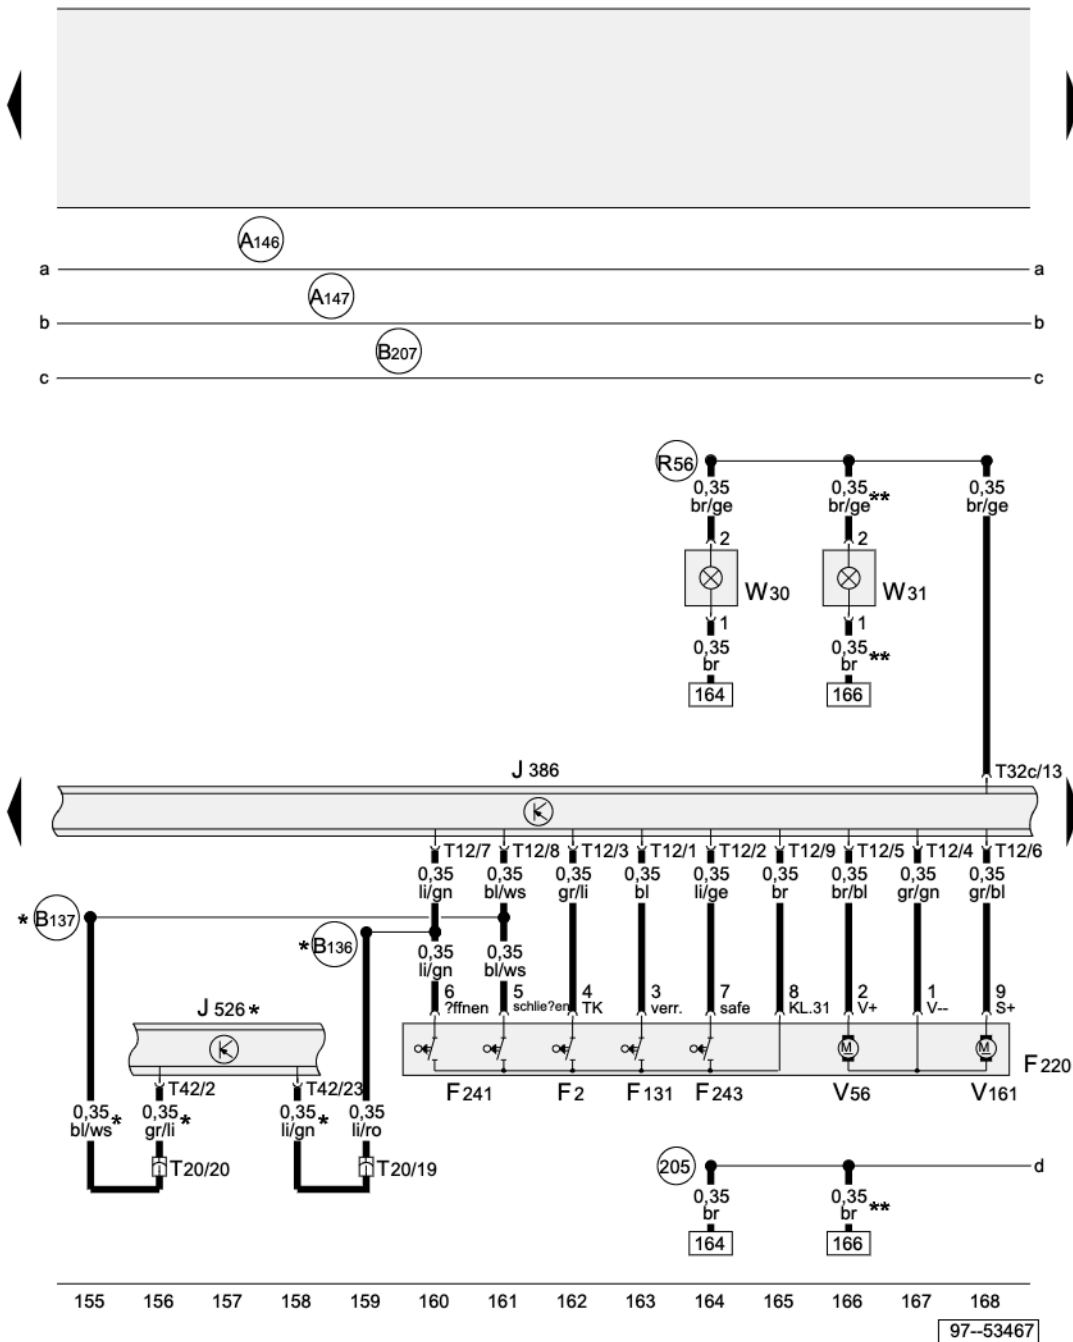


Door control module, driver side with window regulator, Lock unit for central locking, driver side, Door warning light, Entry light

- F2 Door contact Switch - Driver's side
- F131 Left Front Central Locking System Activator/Switch
- F220 Lock unit for central locking, driver side
- F241 Contact switch for lock cylinder, driver side
- F243 Adjusting element for central locking (safe), driver door
- J386 Door control module, driver side
- J526 Telephone/Telematic Control Module
- T12 12-Pin Connector, black, on door control module, driver's door
- T20 20-Pin Connector, black, door A-pillar, left
- T32c 32-Pin Connector, grey, door control module, driver's door
- T42 42-Pin Connector, blue, on Telephone Transceiver
- V56 Driver's Door Central Locking System Motor
- V161 Driver's Door Central Locking (Safe) Motor
- W30 Door warning light, driver side
- W31 Entry light front, left

- 205 Ground connection, in driver's door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B136 Connector (open-comfort system), in interior wiring harness window regulator
- B137 Connector (closed-comfort system), in interior wiring harness window regulator
- B207 Connection (comfort), in passenger compartment wiring harness
- R56 Courtesy Light Connection (in left front door wiring harness)

* with Telematic only
** if it exists

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink

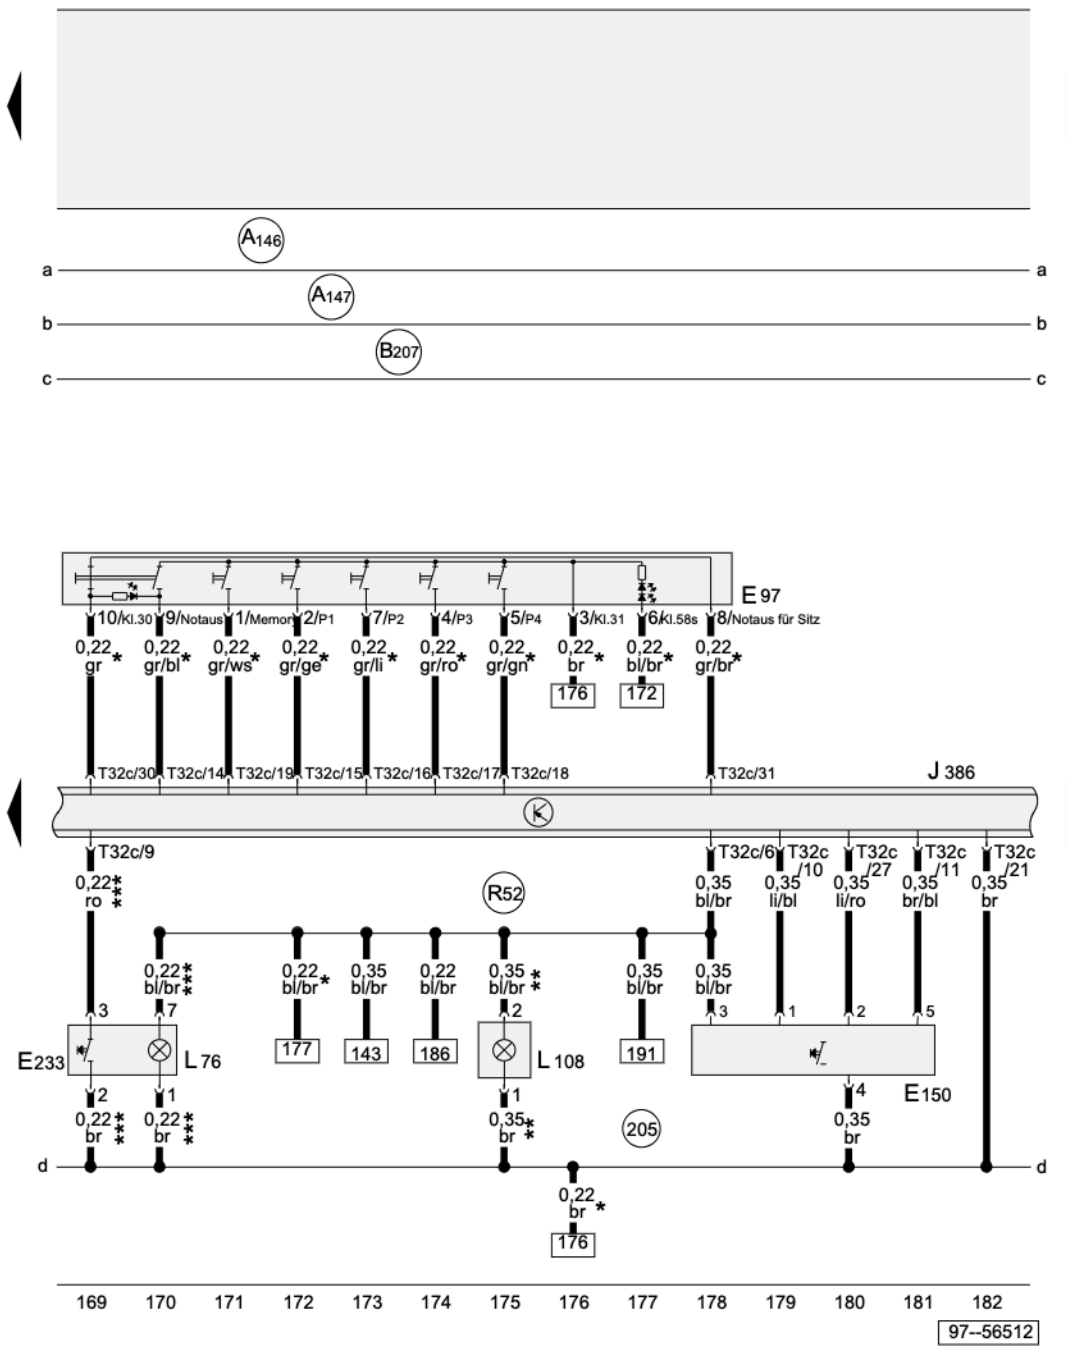

Door control module, driver side with window regulator,
Switch for interior lock, Driver's Seat Memory Program
Control, Door opener lighting

- E97 Driver's Seat Memory Program Control
- E150 Switch for interior lock, driver side
- E233 Switch for rear lid remote control lock
- J386 Door control module, driver side
- L76 Push Button Light
- L108 Door opener lighting, driver side
- T32c 32-Pin Connector, grey, door control module, driver's door
- 205 Ground connection, in driver's door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness
- R52 Connection (58s) (in left front door wiring harness)


* with Electric seat adjustment with memory function only
** if it exists
*** Not for all countries

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink




- E43 Mirror Adjustment Switch
- E48 Mirror Selector Switch
- E168 Switch for Mirror Adjustment with Fold-Away Function
- E183 Switch for passenger compartment monitoring
- E217 Switch for alarm system off
- J386 Door control module, driver side
- K133 Warning light for central locking -SAFE-
- T16b 16-Pin Connector, on door control module, driver's door
- T32c 32-Pin Connector, grey, door control module, driver's door
- V17 Driver's Side Mirror Adjustment Motor
- V149 Driver's Side Mirror Adjustment Motor
- Z4 Heated outside mirror, driver side
- 205** Ground connection, in driver's door wiring harness
- A146** Comfort System High-bus Connection (in instrument panel wiring harness)
- A147** Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207** Connection (comfort), in passenger compartment wiring harness

* with alarm system only

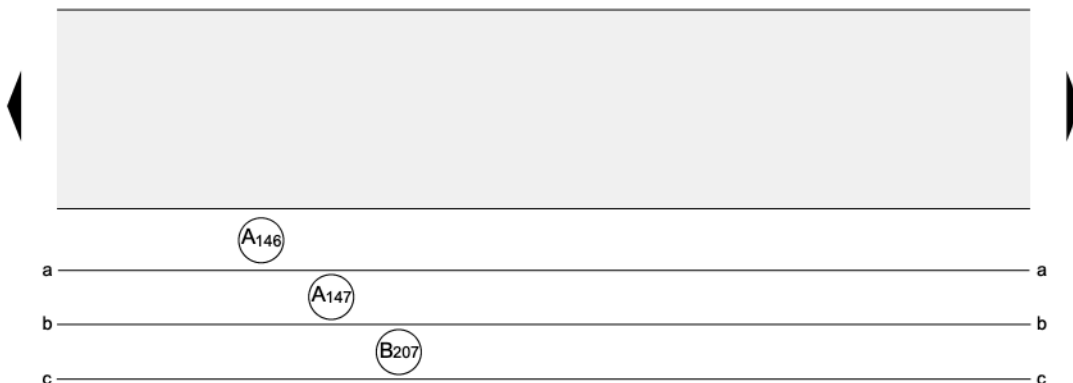

Door control module, driver side with window regulator, Mirror Adjustment with fold-away function

- J386 Door control module, driver side
- T16b 16-Pin Connector, on door control module, driver's door
- V17 Driver's Side Mirror Adjustment Motor
- V121 Motor for fold-in mirror, driver side
- V149 Driver's Side Mirror Adjustment Motor
- Z4 Heated outside mirror, driver side
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness

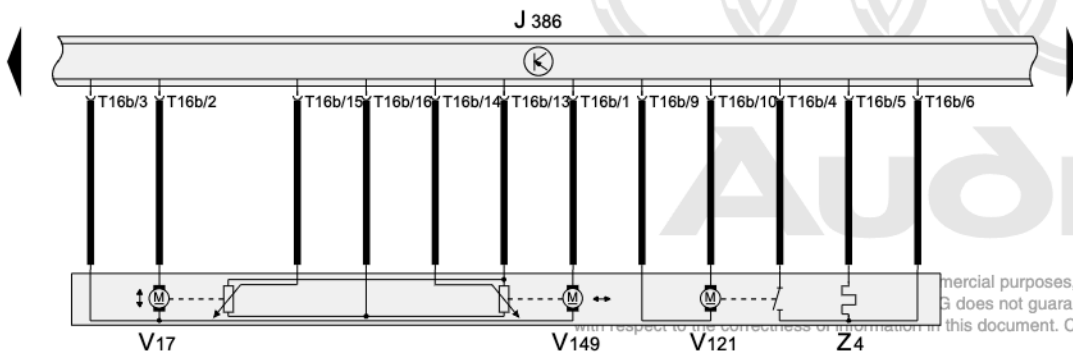


Commercial purposes, in part or in whole, is not
G does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

197 198 199 200 201 202 203 204 205 206 207 208 209 210

97--55335

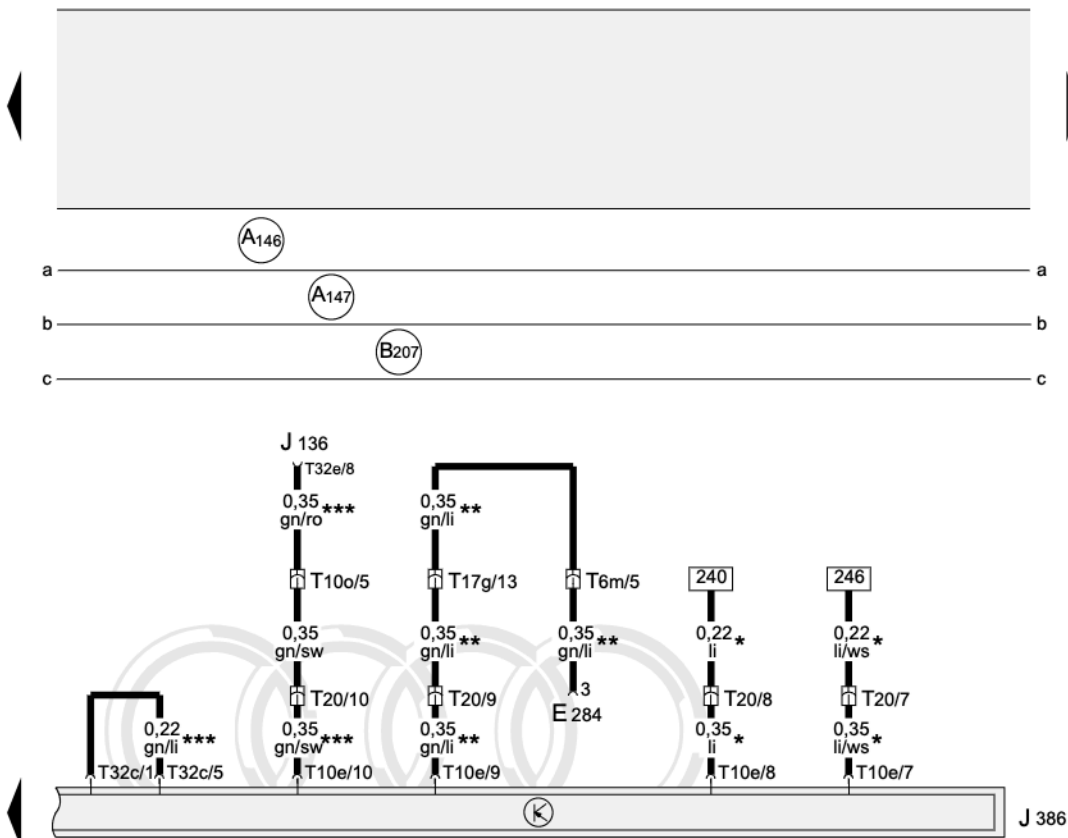

Door control module, driver side with window regulator,
Garage Door Opener Control Head, Memory Seat Control
Module

- E284 Garage Door Opener Control Head
- J136 Memory Seat Control Module
- J386 Door control module, driver side
- T6m 6-Pin Connector, on the Garage Door Opener Control Head
- T10e 10-Pin Connector, black, on door control module, driver's door
- T10o 10-Pin Connector, red, seat wiring connector station, driver seat
- T17g 17-Pin Connector, dark brown, connector station A-pillar, left
- T20 20-Pin Connector, black, door A-pillar, left
- T32c 32-Pin Connector, grey, door control module, driver's door
- T32e 32-Pin Connector, Memory power Seat Control module

- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness

- * with Automatic Day/Night Interior Mirror only
- ** with Garage Door Opener only
- *** with Electric seat adjustment with memory function only

Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

211 212 213 214 215 216 217 218 219 220 221 222 223 224

97-55336

Door control module, passenger side with window regulator,
Lock unit for central locking, passenger side

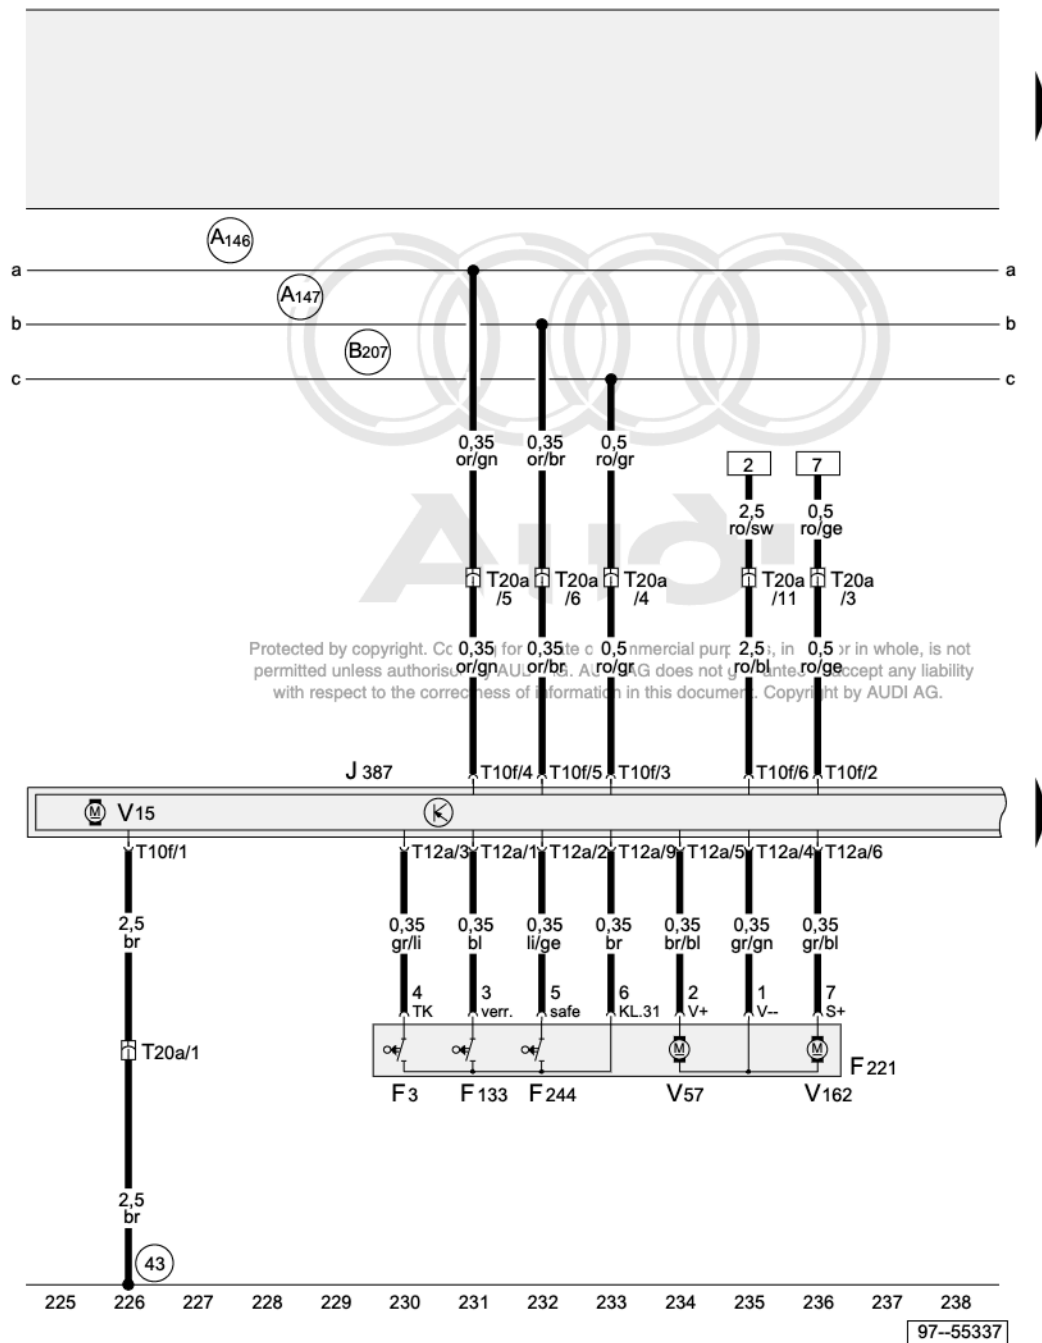


- F3 Door contact Switch - Passenger's side
- F133 Right Front Central Locking System Activator/Switch
- F221 Lock unit for central locking, passenger side
- F244 Adjusting element for central locking (safe), passenger door
- J387 Door control module, passenger side
- T10f 10-Pin Connector, black, on door control module, passenger door
- T12a 12-Pin Connector, black, on door control module, passenger's door
- T20a 20-Pin Connector, black, door A-pillar, right
- V15 Right Window Motor
- V57 Passenger's Door Central Locking System Motor
- V162 Front Passenger's Central Locking (Safe) Motor

- 43 Ground connection (lower right A-pillar)
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink




* with Automatic Day/Night Interior Mirror only

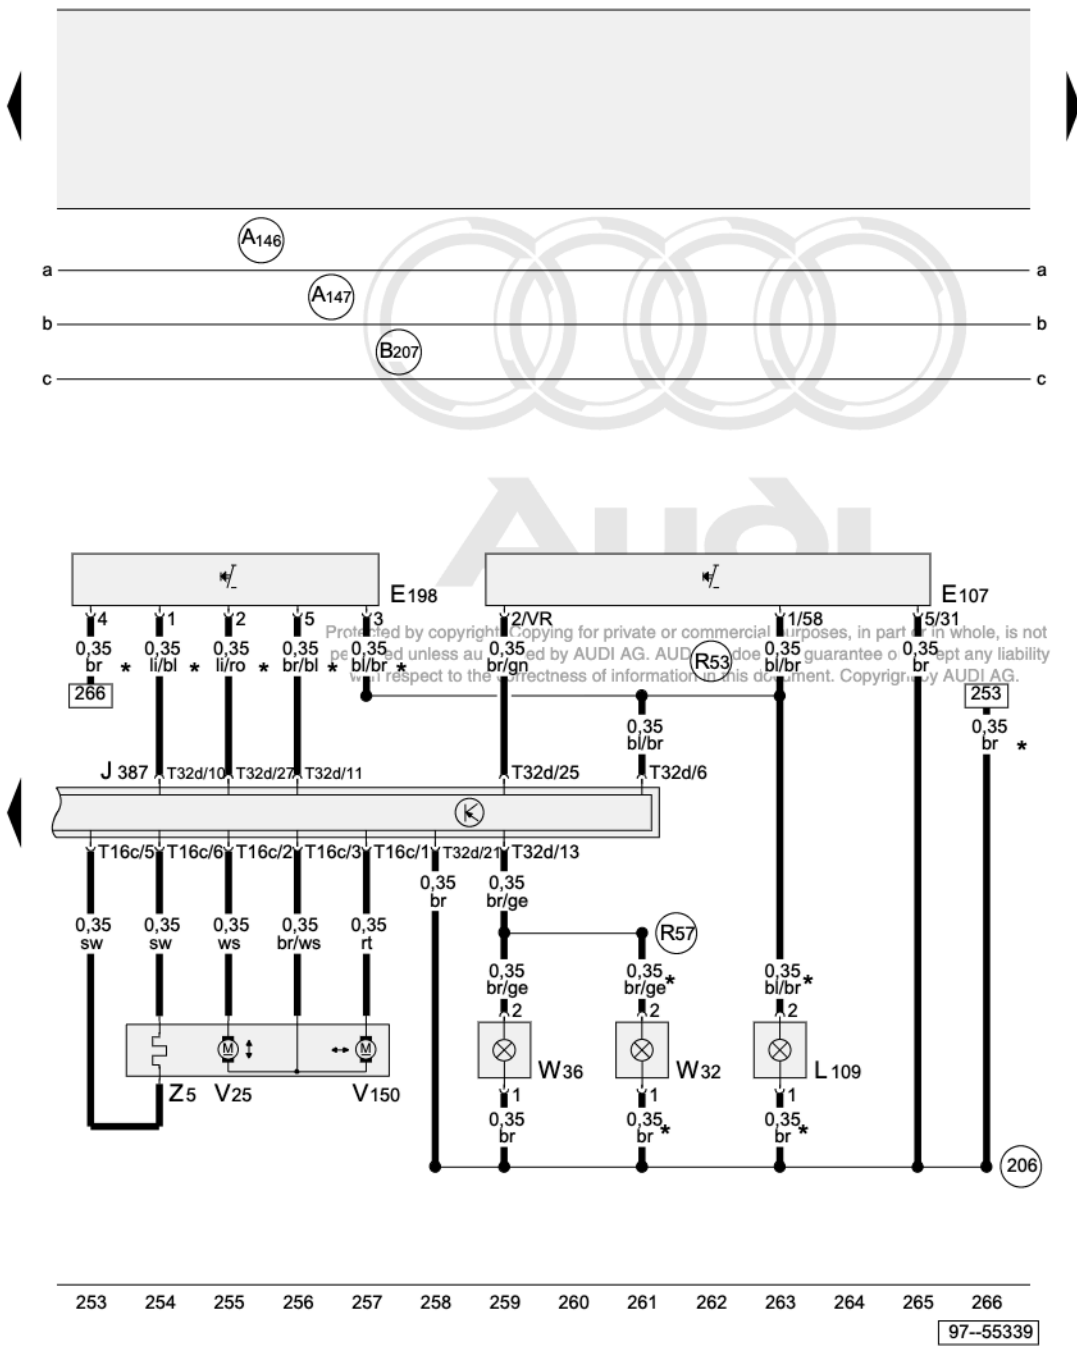

Door control module, passenger side with window regulator, mirror adjustment, Door opener lighting, Entry light, Door warning light

- E107 Switch for window regulator, in passenger door
- E198 Passenger Side Interior Lock Switch
- J387 Door control module, passenger side
- L109 Door opener lighting, passenger side
- T16c 16-Pin Connector, on door control module, passenger door
- T32d 32-Pin Connector, grey, door control module, passenger's door
- V25 Passenger's Side Mirror Adjustment Motor
- V150 Motor for mirror adjustment, passenger side
- W32 Entry light front, right
- W36 Door warning light, passenger side
- Z5 Heated outside mirror, passenger side
- 206 Ground connection, in passenger's door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness
- R53 Connection (58s) (in right front door wiring harness)
- R57 Courtesy Light Connection (in right front door wiring harness)
- * if it exists


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

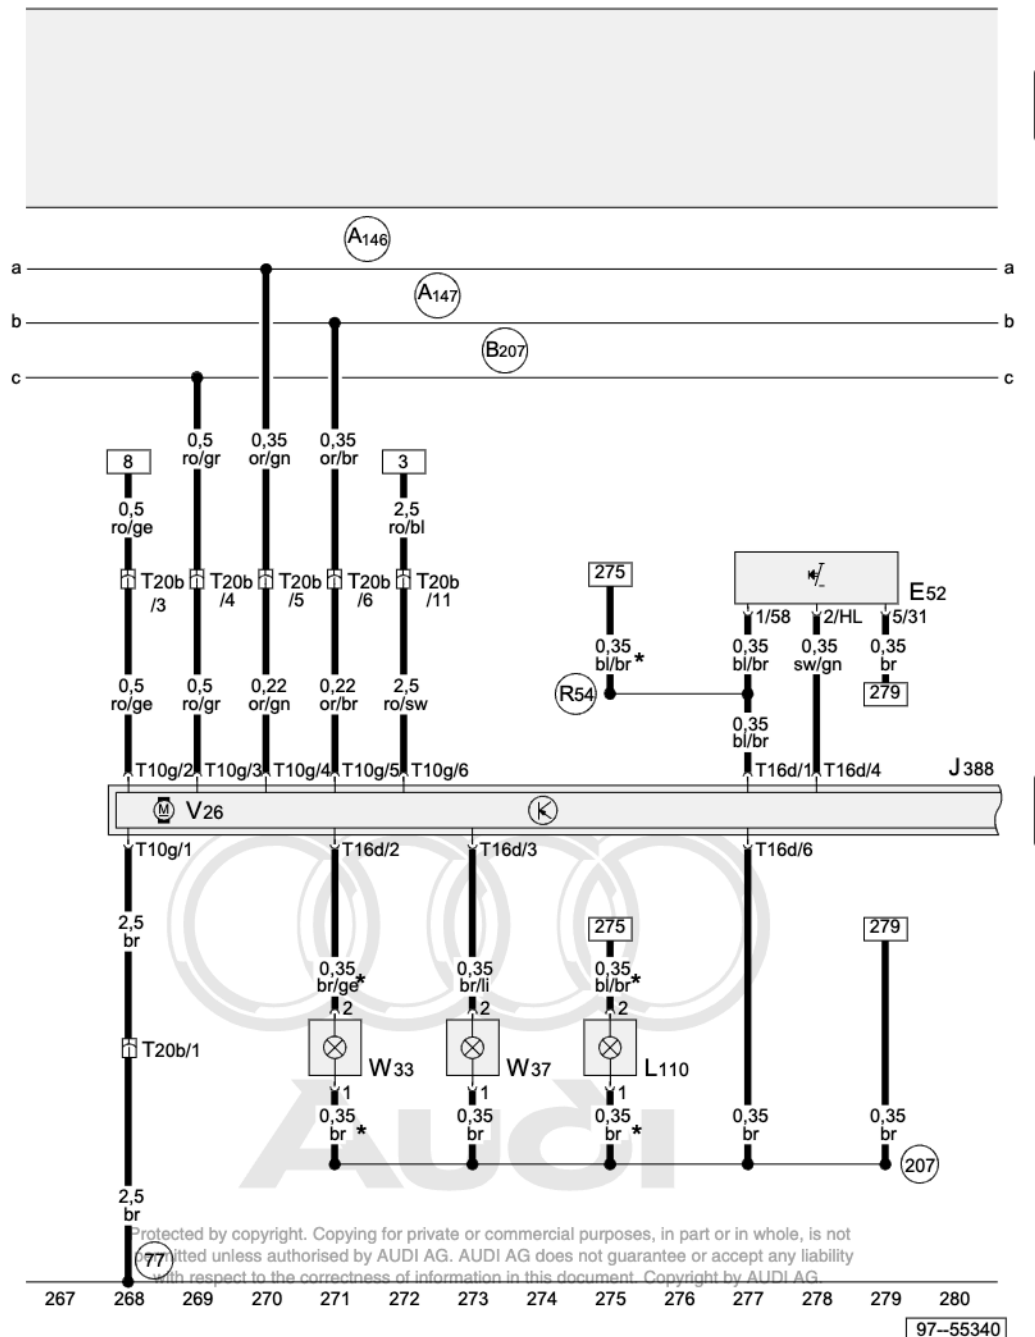

Door control module, rear, left, window regulator, Door opener lighting, Entry light, Door warning light


- E52 Left Rear Window Switch, (In LR Door)
- J388 Door control module, rear, left
- L110 Door opener lighting, left rear
- T10g 10-Pin Connector, black, on door control module, rear, left
- T16d 16-Pin Connector, brown, door control module, rear, left
- T20b 20-Pin Connector, black, door B-pillar, left
- V26 Motor for window regulator, rear, left
- W33 Entry light rear, left
- W37 Door warning light rear, left

- 77 Ground connection (lower left B-pillar)
- 207 Ground connection, in left rear door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness
- R54 Connection (58s) (in left rear door wiring harness)
- * if it exists

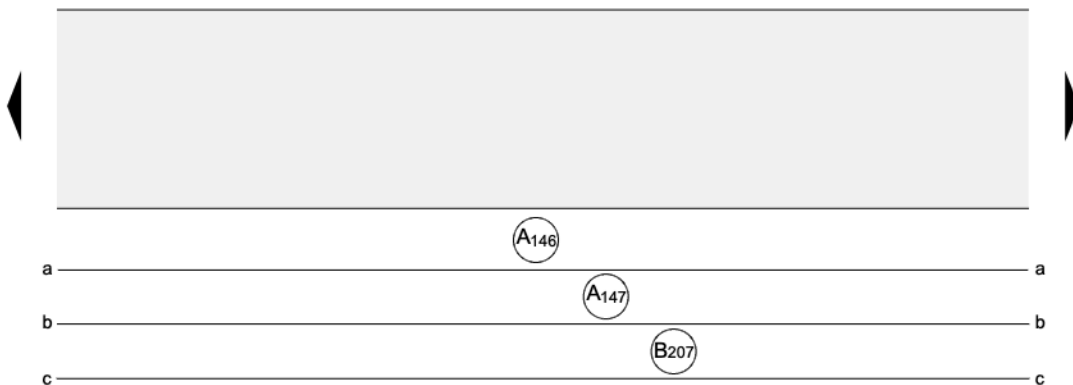


Door control module, rear, left, Lock unit for central locking, rear, left

- F10 Left Rear Door Contact Switch
- F132 Left Rear Central Locking System Activator/Switch
- F222 Lock unit for central locking, rear, left
- F245 Adjusting element for central locking (safe), left rear door
- J388 Door control module, rear, left
- T12b 12-Pin Connector, black, on door control module, rear, left
- V115 Left Rear Central Locking System Motor
- V163 Left Rear Central Locking (Safe) Motor
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness

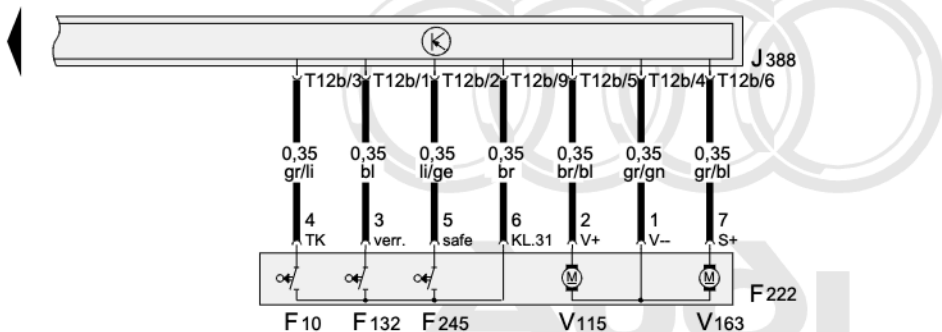

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

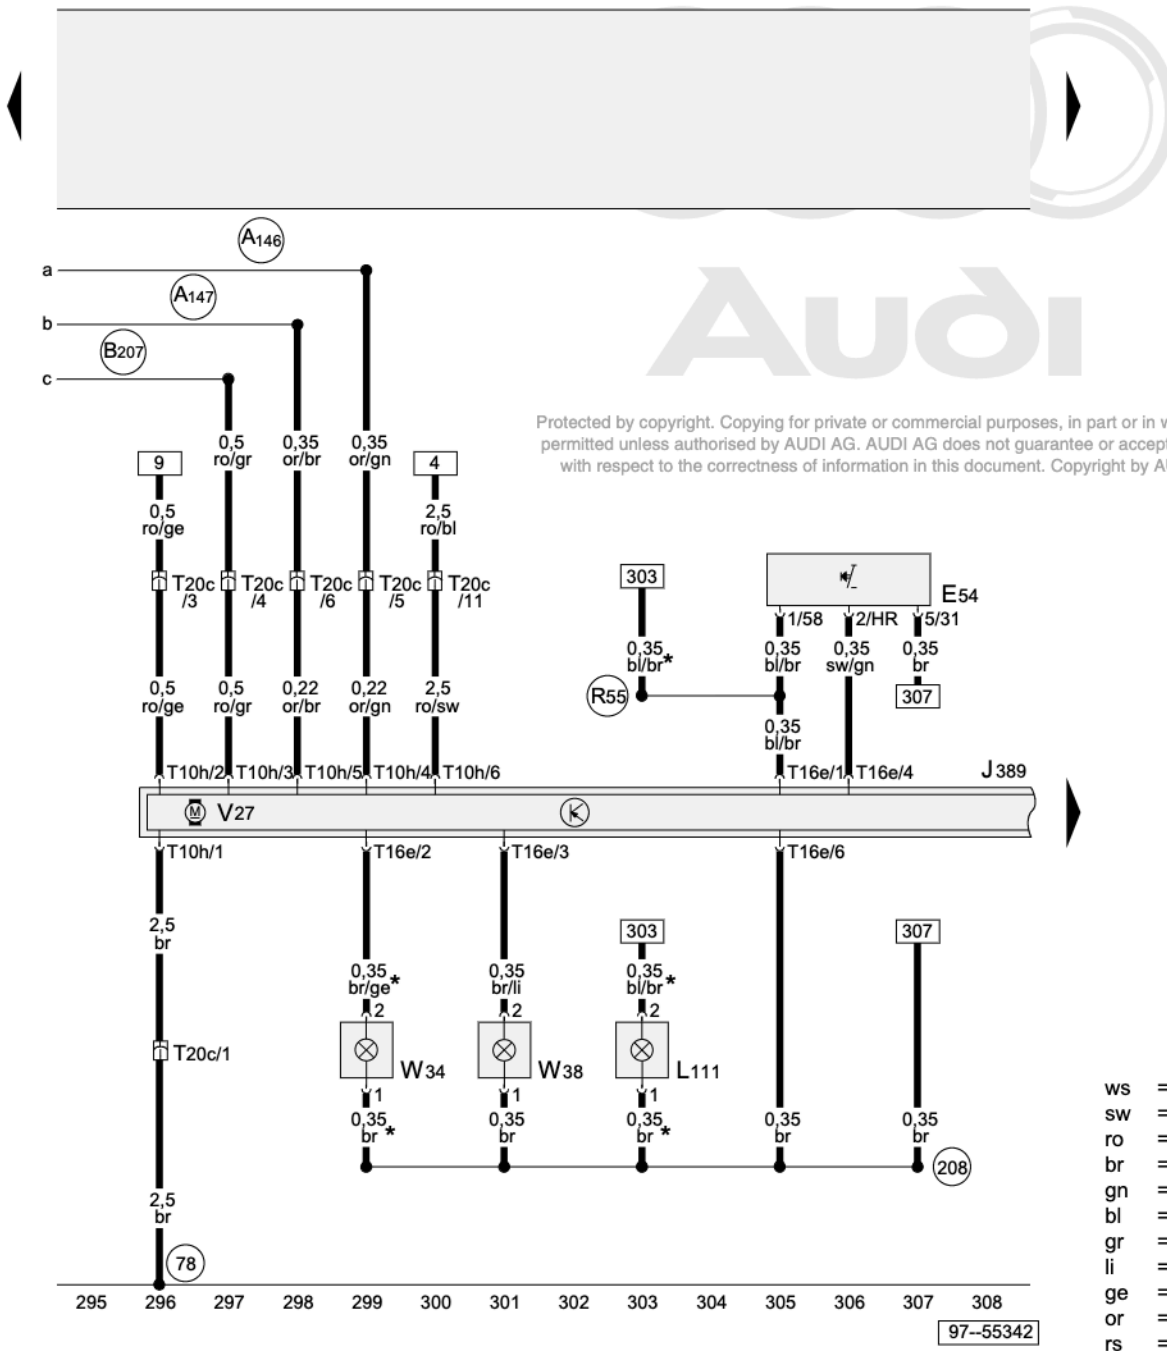

Door control module, rear, right, window regulator, Door opener lighting, Entry light, Door warning light

- E54 Right Rear Window Switch, (In RR Door)
- J389 Door control module, rear, right
- L111 Door opener lighting, right rear
- T10h 10-Pin Connector, black, on door control module, rear, right
- T16e 16-Pin Connector, brown, door control module, rear, right
- T20c 20-Pin Connector, black, door B-pillar, right
- V27 Motor for window regulator, rear, right
- W34 Entry light rear, right
- W38 Door warning light rear, right
- 78 Ground connection (lower right B-pillar)
- 208 Ground connection, in right rear door wiring harness
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- B207 Connection (comfort), in passenger compartment wiring harness
- R55 Connection (58s) (in right rear door wiring harness)
- * if it exists

Door control module, rear, right, Lock unit for central locking, rear, right

- F11 Right Rear Door Contact Switch
- F134 Right Rear Central Locking System Activator/Switch
- F223 Lock unit for central locking, rear, right
- F246 Adjusting element for central locking (safe), right rear door
- J389 Door control module, rear, right
- T12c 12-Pin Connector, black, on door control module, rear, right
- V97 Double Cab Right Rear Door Central Locking System Motor
- V164 Right Rear Central Locking (Safe) Motor



Audi

